



Instructions for Dry Rub off Decals

1. Print off the transparent paper using normal settings on the rougher side of the paper. You will know if you have not printed on the right side because the print will appear watery. If this happens wipe off the ink and start again. You must leave the paper to dry for at least 1 hour or the process will not work and you will run into problems at the later stages. **NB YOU MUST REVERSE ALL IMAGES AND LETTERING**

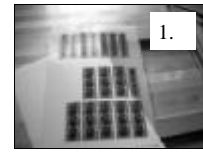


2. The other paper which is part of the set is an adhesive paper. Carefully peel off the backing paper to reveal a very sticky surface, try not to touch it with your hands as it is very sticky. This adhesive paper is available in white or clear.

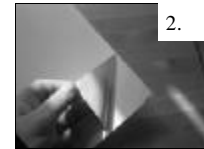

3. The next stage is to attach the backing sheet to the printed sheet. Place your printed sheet face up in front of you, then peel back a section of the adhesive sheet and place on top of print until you have combined both sheets. Make sure you do this stage slowly and press out any air bubbles that might appear. **Leave to cure for 1 Hour**



4. Use a pair of scissors or a craft knife to cut out your designs. Remember if using the white paper to cut carefully around the image or you will have a white border, the clear paper is easier to cut because any border around the image will appear clear.

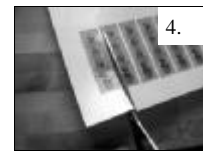

5. Next you need to peel off the shinier side of the image(or paper backing if using white), it can be a bit fiddly so use a sharp edge to catch the surface. Peel off completely and be careful when handling the decal because it is very sticky at this stage.



6. Illustration 6 will show the decal just before it is ready to be stuck to the surface. The Decal is now ready to use.



7. Place the sticky decal face down onto the surface you are decorating and start to rub using your nail, a stick or coin. Make sure you rub well all over the surface.



8. At this stage the decal still has a plastic backing so you need to remove this to reveal the finished decal. We used a sharp knife to do this. If the plastic backing does not come off easily then you have not rubbed the decal enough or have not left the transparent printed paper to dry long enough.



9. The finished decal can be revealed, it appears to be slightly soft so you can use your finger to smooth it out further, the decal will later turn hard. You can use dry rub off decals on any surface from porous to non porous; the trick is to leave the printed transparent paper to dry long enough and you shouldn't run into any problems,

